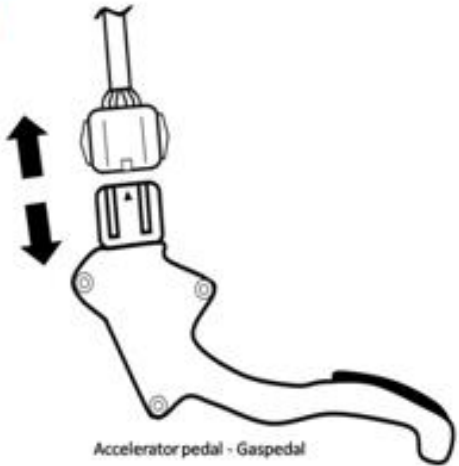
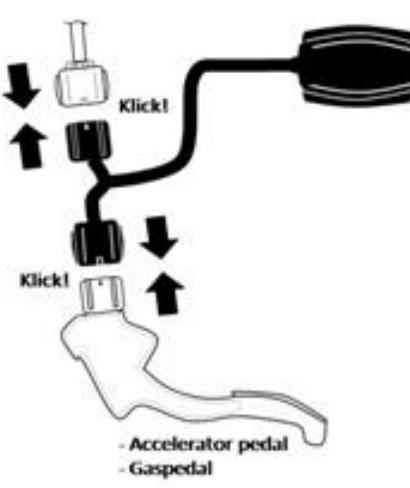


DTE Systems - PedalBox: Installation

<p>1</p>  <p>Accelerator pedal - Gaspedal</p> <p>The diagram shows a side view of an accelerator pedal. A cylindrical plug is inserted into the top of the pedal's shaft. Two vertical arrows, one pointing up and one pointing down, are positioned to the left of the plug, indicating the loosening process.</p>	<ol style="list-style-type: none">1. Turn off the ignition and wait five minutes.2. Loosen the plug connection from the original plug adapter.
<p>2</p>  <p>- Accelerator pedal - Gaspedal</p> <p>The diagram shows the same accelerator pedal as in step 1. A black cable harness is connected to the top of the pedal. The harness has two connectors, each labeled 'Klick!'. Arrows indicate the connectors being pushed onto the pedal's shaft. The harness also has a larger connector at the end, which is shown connected to a PedalBox unit.</p>	<ol style="list-style-type: none">3. Attach both OEM connectors to the PedalBox PlugNPlay harness.4. Route the cables in such a way, that they are securely installed and are not interfering with anything else.5. Attach the PedalBox at a comfortable height in relation to the driver's seat.